

DigiLEAK

DigiFLO Any Gas Tester
Gas or Water Leak Detector



WARRANTY

PLEASE NOTE: THE WARRANTY BELOW WAS DRAFTED TO COMPLY WITH FEDERAL LAW APPLICABLE TO PRODUCTS MANUFACTURED DRAFTED AFTER JULY 4, 1975.

The warranty is extended only to original purchaser/user of our product.

This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

DigiFLO warrants its parts to be free of defects in material and workmanship for a period of One (1) year from date of purchase. If within such warranty period any such product shall be proven to be defective, such product shall be repaired or replaced at DigiFLO option. This warranty does not include any labor for shipping charges incurred in replacement part installation or repair of any such product. DigiFLO's sole obligation and your exclusive remedy under this warranty shall be limited to repair and / or replacement. For warranty service please contact your supplier or dealer.

DO NOT return products or parts directly to our factory without prior written consent. Any such shipments will be refused.

LIMITATIONS AND EXCLUSIONS: THE FORGOING WARRANTY SHALL NOT APPLY TO SERIAL NUMBERED PRODUCTS IF THE SERIAL NUMBER HAS BEEN REMOVED OR DEFACED, PRODUCTS SUBJECT TO NEGLIGENCE, ACCIDENT, IMPROPER OPERATION, MAINTENANCE OR STORAGE, COMMERCIAL OR INSTITUTIONAL USE, PRODUCTS MODIFIED WITHOUT DIGIFLO EXPRESS WRITTEN CONSENT (INCLUDING BUT NOT LIMITED TO MODIFICATIONS THROUGH THE USE OF UNAUTHORIZED PARTS OR ATTACHMENTS) OR TO PRODUCTS DAMAGED BY REASON OF REPAIRS MADE TO ANY COMPONENT WITHOUT DIGIFLO SPECIFIC WRITTEN CONSENT OR TO PRODUCTS DAMAGED BY CIRCUMSTANCES BEYOND DIGIFLO CONTROL. SUCH EVALUATION SHALL BE SOLELY DETERMINED BY DIGIFLO. WARRANTY SHALL NOT APPLY TO PROBLEMS ARISING FROM NORMAL WEAR OR FAILURE TO ADHERE TO THE FOLLOWING INSTRUCTIONS.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, IF ANY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL NOT EXTEND BEYOND THE DURATION OF THE EXPRESSED WARRANTY PROVIDED HEREIN AND THE REMEDY FOR VIOLATIONS OF ANY IMPLIED WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT PURSUANT TO THE TERMS CONTAINED HEREIN. DIGIFLO SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL DAMAGES WHATSOEVER.

THIS WARRANTY SHALL BE EXTENDED TO COMPLY WITH STATE/PROVINCIAL LAWS AND REQUIREMENTS.

Measure gas molecular weight

1. Acclimate DigiLEAK to surrounding temperature for one minute, away from measurement location.
2. Press for 1/2 second and then release the front button. Display will come on displaying 29.0 – molecular weight of clean air.
3. With inlet positioned in target gas location & outlet open, repeatedly press for 1/2 second and then release the front button. Internal pump will activate and surrounding gas will enter the sensor. Observe the displayed molecular weight.

Subsurface water pipe leak detection

Caution: Thorough expertise in using pressurized Helium & CO₂ gases is mandatory. Tightly adhere to to gas manufacturer directions.


- With street valve closed, empty water from pipes. Then while pressure is increasing apply up to 15psi (105 KPa) Helium, or CO₂ gas to the pipe. This can be done by connecting to a garden hose valve, with main house valve open and street valve closed.
- With pressure applied, wait for 10 to 30 minutes to allow sufficient amount of Helium, or CO₂ to leak through broken / cracked pipe segment.
- Acclimate DigiLEAK to surrounding temperature for one minute, away from the location of the leak.
- Press for 1/2 second and then release the front button. Internal pump will inject clean air into the sensor. Display will turn on displaying 29.0 – molecular weight of clean air.
- With inlet positioned next to the ground & outlet open, repeatedly press for 1/2 second and then release the front red button. Internal pump will inject surrounding air into the sensor. Observe the displayed molecular weight. Molecular weight of CO₂ is 44; Molecular weight of Helium is 4, molecular weight of air is 29. Upon approaching the leak, displayed molecular weight of air will change as follows:
 - increase if CO₂ gas is used
 - Decrease if Helium gas is used.
 - Front Leak detect / proximity LED will turn orange and then red.

gas leak detect

1. Determine if target gas molecular weight is lighter or heavier than 29.0 – molecular weight of air.
2. Acclimate DigiLEAK to surrounding temperature for one minute, away from the location of the leak.
3. Press for 1/2 second and then release the front button. Display will come on displaying 29.0 – molecular weight of clean air.
4. With inlet & outlet open repeatedly press for 1/2 second and then release the front button. Internal pump will activate and surrounding air will enter the sensor. Observe the molecular weight displayed. As you approach the desired target gas location, where target gas is mixing with air, 29.0 molecular weight of air, subject to target gas molecular weight, will change to a different value. Leak Detect LED will turn orange then Red indicating target gas close proximity.

Indication For Use:

This tool is to be used by certified technical personnel to detect gas leaks and to measure molecular weight of Air / other gas mixtures. DigiLEAK can only measure molecular weight of gas in the range of 10 to 120 g/mol

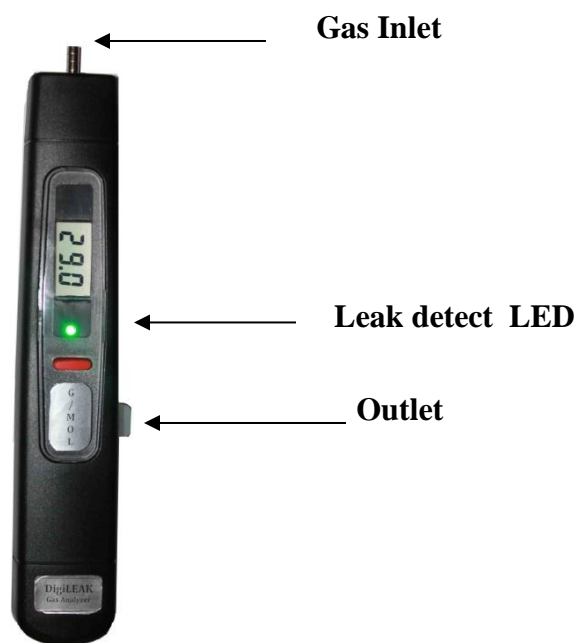

How to pinpoint a leak

Find & mark at least 3 locations where DigiLEAK shows a red light. Write DigiLEAK displayed molecular weight of air, at each of the marks. Draw a straight line between these marks, thus forming a triangle. The leak is within the area of the triangle, closest to the mark with lowest DigiLEAK displayed molecular weight.

Specification:

Size	9" x 1.5" x 1" / 23 x 3.8 x 2.5cm
Weight with battery	164g
Response Time	20 mili-seconds
Gas Molecular weight range	10 to 120 g/mol
Molecular weight accuracy of resolution	±0.1 g/mol
Operating Temperature	-45 to 70°C
Survival Temperature	-85 to +85°C
Battery	Single Alkaline 9V battery
Battery Life	1000+ read cycles

BATTERY

Reasons to replace the battery:

- **BAt** is seen blinking on the display.
- DigiLEAK does not respond to a Power On.

CHANGING THE BATTERY

1. Open the rear battery compartment.

Caution: Observe proper battery installation.

2. Carefully lift the battery from its location.
3. Remove the clips from the battery.
4. Apply the clips to a new battery.
5. Position the new battery within its groove, with the clips facing the Inlet.
6. Turn ON the unit. The display should turn ON. If it does, close the battery compartment. If it does not, replace the battery with another.



TROUBLESHOOTING

There are no user serviceable parts within the DigiLEAK.

If the unit fails to come ON, replace the battery with a known good battery.

If the unit fails to come on with known good battery, contact DigiFLO Technical Service for repair.

If the unit comes on and the reading are erratic or frozen, contact DigiFLO Technical Service for repair.

If the front button does not respond, contact DigiFLO Technical Service for repair.

If a segment within the display is missing or is displayed intermittently, contact DigiFLO Technical Service for repair.